

Installation instructions for MR1 Overhead Molle Storage Panel

Please read these instructions entirely before starting.

If you are missing anything please email RefinedCycle@gmail.com.




MR1 Components

1. MR1 Panels (Qty. 2)
2. MR1 Hangers (Qty. 2)
3. 1/4-20x1/2 Carriage Bolts (Qty. 8)
4. 1/4-20x3/4 Carriage Bolts (Qty. 4)
5. 1/4-20 Lock Nuts (Qty. 12)
6. 1/4" Washers (Qty. 4)



Snap open the cargo area hanger hook to access the M6 screw and remove it from both sides of the vehicle.

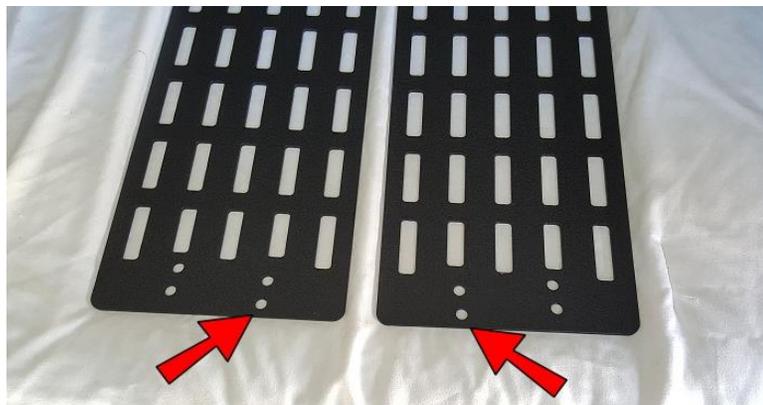

Lay the two MR1 Panels next to each other and make SURE the 4 bolt holes angle toward each other. In other words, one set of holes in each panel is lower than the other. Make sure those lower holes are toward the middle as shown.



Place an MR1 Hanger on TOP of each Panel and insert 1/4-20x1/2 Carriage Bolts into the holes and secure tightly using 1/4-20 Lock Nuts.



Flip the Panels over, lay one Panel end over the other and insert the 1/4-20x3/4 Carriage Screws from the BOTTOM. Place Washers on them and START the 1/4-20 Lock Nuts.

DO NOT TIGHTEN the Lock Nuts.



Since the Panels will hug the ceiling tightly, it's easiest to install the Molle Bags now.

Note: Remember how the MR1 Hangers angled slightly? That angle points toward the FRONT of the vehicle. If you get them backwards the Panel won't lay flat against the ceiling. Keep that in mind when installing your Molle Bags so that they are most accessible from the desired direction, (typically the back).



At this point you may find it easiest to put the back seats down and lay in a "bench press" position with your feet toward the front to save from twisting your back into all sorts of new Yoga positions.

Use the M6 screws previously removed from the cargo hanger hooks to attach each side. Rotate the Panel slightly back so that it lays flat against the ceiling. **ONLY FINGER TIGHTEN** the M6 screws at this point.



Line up the two panels and press them **FIRMLY** against the ceiling with one hand, while tightening the four Lock Nuts with the other.

The goal is to create as much of an upward curve as possible. This is what gives the Panels strength when weight is added to them.



Go back and tighten the Hanger screws.

Now organize those pouches!

Please make sure all items are completely secure!