


Installation instructions for RR2-Replacement Rock Rings for 16" Toyota TRD "Beadlock" Wheels

It is highly recommended that you use a thread lock compound such as Loctite brand on all threads to keep them from vibrating loose.

Please read these instructions entirely before starting.

This picture shows the components of the RR2. Parts will be referred to by the names & numbers shown here. If you are missing anything please email RefinedCycle@gmail.com.

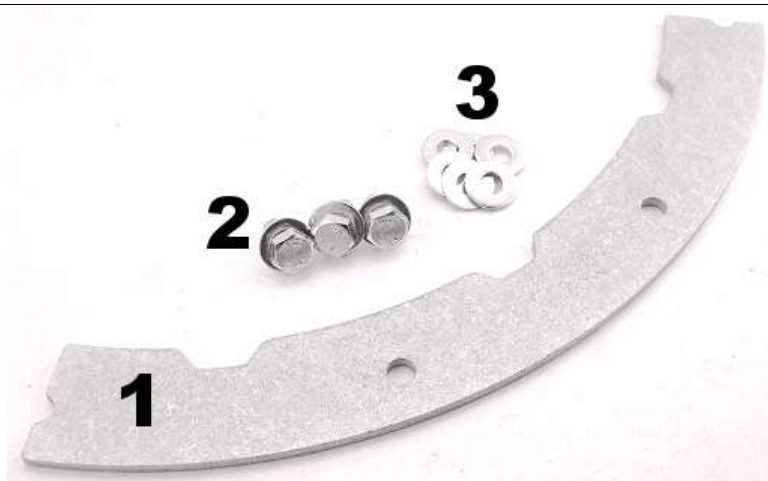

1. RR2
2. M8-1.0x16 Hex Head Bolt (Qty. 3 per section)
3. 1/4" Washer (Qty. 9 per section)



Use two washers on each hole under the RR2.



Use one washer on each M8 Bolt and apply Blue Loctite to the bolt.



Start all of the bolts, then tighten the shared holes first so that you can adjust the gaps evenly and line up the two ends evenly, then tighten the rest of the bolts.

Important: Do not over tighten the bolts. About 5-6 lb./sq. in. torque is sufficient. You do not want to strip the aluminum holes in your wheels.

When you trail damage a section just flip that section over and continue use!

Enjoy!